



The Synchronization Experts.



MANUAL

BPE-2010

Setup Guide

September 27, 2022

Meinberg Funkuhren GmbH & Co. KG

Table of Contents

1 Imprint	1
2 Important Safety Information	2
2.1 Product Documentation	2
2.2 Prevention of ESD Damage	3
2.3 Power Supply	4
2.4 Cabling	4
3 Replacement or Installation of a Hot-pluggable IMS Module	5
3.1 Important Information Regarding Hot-Pluggable IMS Modules	6
4 BPE-2010 - Backplane Port Expander	7
5 RoHS and WEEE	8

1 Imprint

Meinberg Funkuhren GmbH & Co. KG
Lange Wand 9, 31812 Bad Pyrmont, Germany

Phone: + 49 (0) 52 81 / 93 09 - 0

Fax: + 49 (0) 52 81 / 93 09 - 230

Website: <https://www.meinbergglobal.com>

Email: info@meinberg.de

Date: September 27, 2022

2 Important Safety Information



Please ensure that IMS modules designed for "hot-plugging" (modules that are removable and insertable while a system is in operation) are always handled with the utmost care.

Before performing any maintenance work on the system:

- We recommend making a backup of any stored configurations (e.g. using a USB flash drive or from the Web UI)
- Take note of the chapter "Prevention of ESD Damage".
- Take note of the chapter "Power Supply".

2.1 Product Documentation

Detailed product documentation is provided on a USB flash drive delivered with the Meinberg system. The manuals can also be downloaded from the Meinberg website at <https://www.meinbergglobal.com>, where you can enter your system name into the search box at the top of the page to find the relevant manual. Alternatively, contact Meinberg Support for further assistance.

The "Docs & Support" menu on the Web Interface also provides user manuals for time server administrators.



This manual contains important safety instructions for the installation and operation of the device. Please read this manual thoroughly before using the device.

This device may only be used for the purpose described in this manual. In particular, the specified operating limits of the device must be heeded. The person setting up the device is responsible for safety matters in relation to any larger system in which the device is installed!

Failure to observe these instructions may have an adverse impact on device safety!

Please keep this manual in a safe place.

Target Readership

This manual is only intended to be used by qualified electricians, or by persons who have been appropriately instructed by a qualified electrician and who are familiar with applicable national standards and with safety rules & regulations. This device may only be installed, set up, and operated by qualified personnel.

2.2 Prevention of ESD Damage



ATTENTION!

An ESDS device (electrostatic discharge-sensitive device) is any device at risk of damage or malfunction due to electrostatic discharges (ESD) and thus requires special measures to prevent such damage or malfunction. Systems and modules with ESDS devices usually bear the following symbol:



Symbol Indicating Devices with ESDS Components

The following measures will help to protect ESDS components from damage and malfunction.

When preparing to dismantle or install devices:

Ground your body (for example, by touching a grounded object) before touching sensitive devices.

Ensure that you wear a grounding strap on your wrist when handling such devices. These straps must in turn be attached to an uncoated, non-conductive metal part of the system.

Use only tools and devices that are free of static electricity.

When transporting devices:

Devices must only be touched or held by the edges. Never touch any pins or conductors on the device.

When dismantling or installing devices:

Avoid coming into contact with persons who are not grounded. Such contact may compromise your connection with the earth conductor and thus also compromise the device's protection from any static charges you may be carrying.

When storing devices:

Always store devices in ESD-proof ("antistatic") bags. These bags must not be damaged in any way. ESD-proof bags that are crumpled or have holes cannot provide effective protection against electrostatic discharges.

ESD-proof bags must have a sufficient electrical resistance and must not be made of conductive metals if the device has a lithium battery fitted on it.

2.3 Power Supply



WARNING!

The IMS system in which the module is used is operated at a dangerous voltage. Please refer to your IMS Manual for more information about safety.

When removing a hot-pluggable power supply unit, always disconnect its power cable before removing it from the IMS system.

Never open a power supply unit—there may still be hazardous residual voltages present even after disconnection from the mains supply. In the event that a power supply unit is no longer working (e.g. defective), please return it to Meinberg for repair.

Failure to observe these safety instructions may result in serious injury and/or property damage. The IMS system must only be installed, set up, and operated by qualified personnel.

2.4 Cabling



WARNING!


Danger of death from electric shock! Never work on cables while the power is live! Always disconnect the cables from the devices at **both** ends before working on the plugs and terminals of connected cables!

3 Replacement or Installation of a Hot-pluggable IMS Module

If the system is supplied with an antenna and antenna cable, it is advisable to first mount the antenna in a suitable location (see chapter Antenna Mounting) and lay the antenna cable.

Please use a Torx screwdriver (T8 x 60) for removal and installation of the module.

1. Follow the safety instructions at the beginning of this manual!
2. Remove the two marked Torx screws from the module holder plate or the cover plate of the empty slot.
3. **Note when removing!**
Pull the module carefully out of the guide rail. Note that the module is firmly anchored in the connector block of the housing. You need a certain amount of force to release the module from this link. Once the connection to the connector block of the system's backplane is loosened, the module can be easily pulled out.

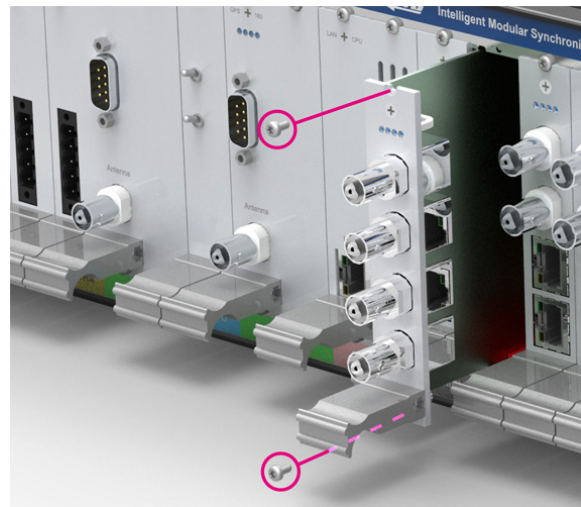

4. **Note during installation!**
Please ensure that the module is correctly inserted into the two guide rails of the system housing as otherwise damage to the module and the housing could be caused. Make sure that the module is securely locked into the connector block before you fasten the two screws.
5. Now you can put the installed module into operation.



Attachment points of an 1U IMS system

3.1 Important Information Regarding Hot-Pluggable IMS Modules

The following information should be strictly observed when replacing IMS modules during operation. Not all IMS modules are fully hot-pluggable. For example, it is naturally not possible to replace a power supply unit in a system without PSU redundancy without first having installed a second power supply unit while the system is in operation.

The following rules apply for the individual IMS slots:

PWR Slot:	"Hot-Swappable"	If you operate your system with only one power supply unit, a second power supply unit must be installed before removing or replacing it in order to keep your system on.
I/O, ESI and MRI Slots:	"Hot-Pluggable".	
CLK1/CLK2 Slots:	"Hot-Pluggable"	When a clock module is replaced or installed, it is important to rescan the reference clocks ("Rescan Refclocks") in the "System" menu of the Web Interface.
RSC/SPT Slots:	"Hot-Pluggable"	It will not be possible for your IMS system to switch between signal generators while the RSC/SPT is not installed.

CPU Slot:	" <u>Not</u> Hot-Pluggable"	Before the CPU is removed, the IMS system must be powered down. Please note that after powering on and rebooting the LANTIME Operating System, the configuration of some IMS modules may be reset to factory defaults!
------------------	-----------------------------	---



Information:

The NTP service and access to the web interface will be unavailable while the CPU is not installed. Management and monitoring functions will also be disabled.

4 BPE-2010 - Backplane Port Expander

Output Signals: 4 x PPS / TTL
 Connector: BNC female
 Pulse width: 200 ms
 Level: 2.5 V, active high
 Impedance: 50 Ω
 Rise/Fall time: 4 ns (+-1 ns)

Power Requirements: 5 V +-5%, 150 mA

 
Status Indicators

LED St: BPE status
 LED In: Status of the backplane's output signals
 LED A: BPE status - output signals (1 + 2)
 LED B: BPE status - output signals (3 + 4)

Initialisation: LED St: blue until USB is configured
 LED In - LED B: off until USB is configured

USB is configured: LED St: blue
 LED In - LED B:
 0,5 sec. red -> 0,5 sec. yellow ->
 0,5 sec. green -> 0,5 sec. off

Normal Operation: LED St. + LED In: green
 LED A: green, if the desired signal is present
 on output 1 and output 2
 LED B: green, if the desired signal is present
 on output 3 and output 4



5 RoHS and WEEE

Compliance with EU Directive 2011/65/EU (RoHS)

We hereby declare that this product is compliant with the European Union Directive 2011/65/EU and its delegated directive 2015/863/EU "Restrictions of Hazardous Substances in Electrical and Electronic Equipment". We ensure that electrical and electronic products sold in the EU do not contain lead, cadmium, mercury, hexavalent chromium, polybrominated biphenyls (PBBs), polybrominated diphenyl ethers (PBDEs), bis(2-ethylhexyl)phthalat (DEHP), benzyl butyl phthalate (BBP), dibutyl phthalate (DBP), or diisobutyl phthalate (DIBP) above the legal limits.



WEEE status of the product

This product is handled as a B2B (Business to Business) category product. To ensure that the product is disposed of in a WEEE-compliant fashion, it can be returned to the manufacturer. Any transportation expenses for returning this product (at end-of-life) must be covered by the end user, while Meinberg will bear the costs for the waste disposal itself.





BFE-2010_QSG_270922